


# How to measure for roller blinds

**NATURAL  
CURTAIN**  
— COMPANY —


Use a metal tape measure for accuracy. Measurements should be in cm to the nearest 0.5cm. Double check your measurements.

	Window name	Width <b>(W)</b>	Drop <b>(D)</b>	
Dimensions		cm	cm	Installation height
				cm
Control	Cord / Sidewinder	Left / Right		


## 1 Where do you want to hang your blind?

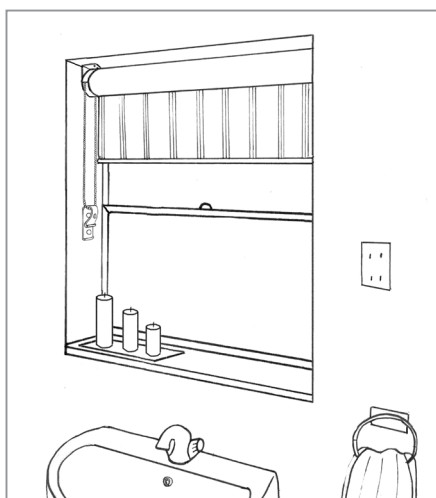

**A - Inside recess**

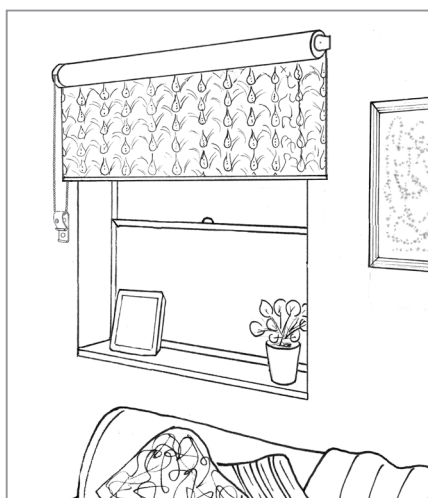


**B - Outside recess**

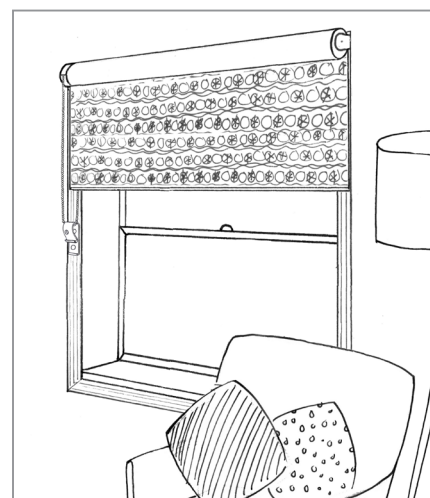

**C - Fixed to wooden window architrave**


## 2 Measure your window

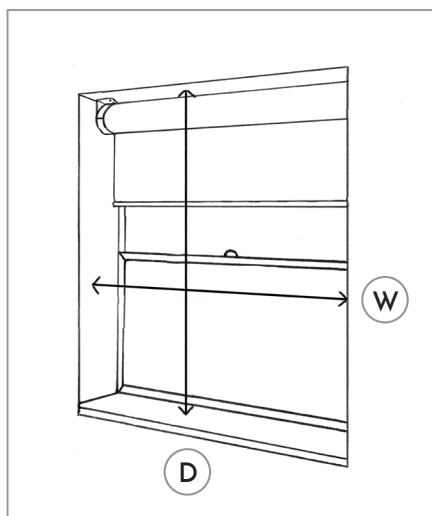

**A - Inside recess**

The recess must be a minimum of 6cm deep otherwise there will not be enough space to fit the blind brackets.


Measure the width at the narrowest point to ensure that the blind can move up and down freely.

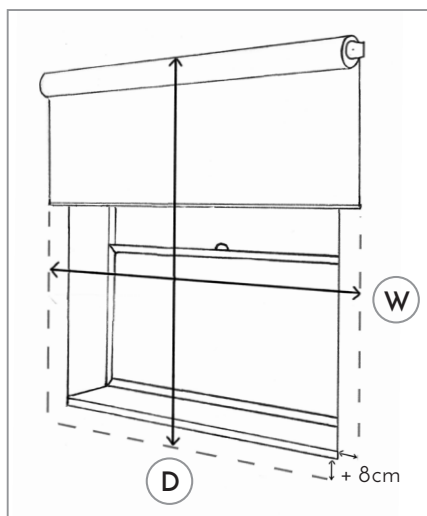

**B - Outside recess**

We recommend at least 8cm overlap outside the frame, particularly if you have a blackout blind and are concerned about light leakage.


Check for any obstructions that might stop your blind hanging freely.

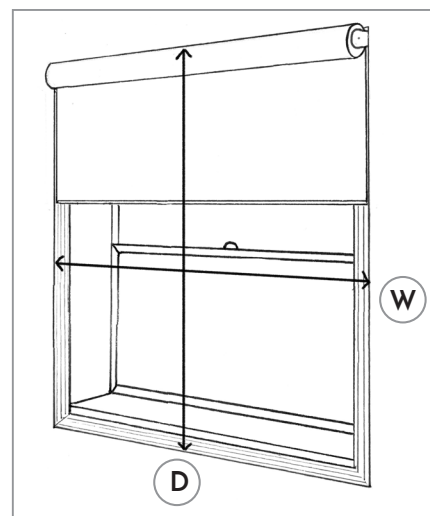


**C - Fixed to wooden window architrave**

Check for any obstructions that might stop your blind hanging freely.


3 Standard or reverse roll? Which side would you like your chain?

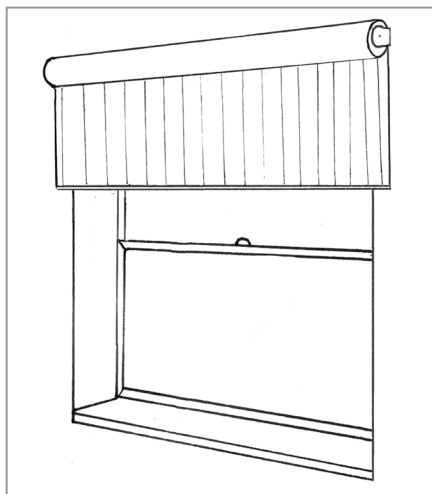


A - Standard roll

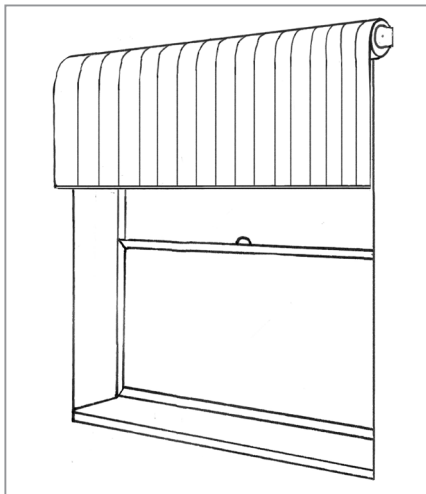

B - Reverse roll

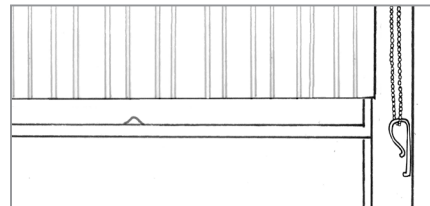


Right side

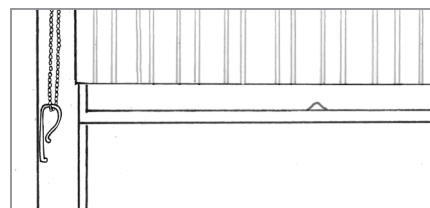

C - Left side

4 Installation height

To comply with child safety legislation we require your installation height (H) to ensure your chain is a safe distance (at least 1.5m) from the floor.

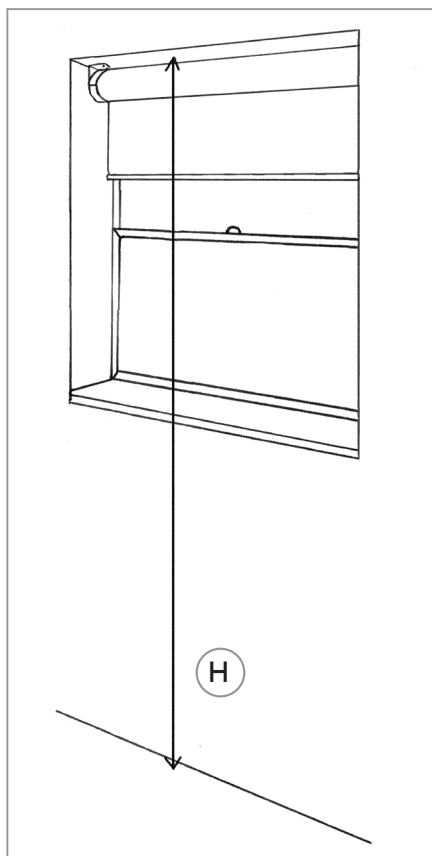

**MAKE IT SAFE!**  
Read the child safety leaflet included with this product to ensure your blind is safely installed

Order online or call 01394 775 670